



## BOLT IN SPACER BLOCK INSTRUCTIONS

### - FITS AIR & HD RECEIVER SHOCKERHITCH

The Spacer Block is supplied standard with Shocker Hitch Receiver Mount 2" shank "Deep Frame" models, easily identified by having 8 holes vertically for ballmount adjustment.


The primary function of the Spacer Block is to level the upper airbag mounting plate, known as the "paddle" and keep the airbag at its proper operating height.

Due to variances in truck receiver tube design the usage of the spacer block will vary. Please refer to Figure 1 or 2 to determine which scenerio your installation matches and take the appropriate action as indicated. See Figure 3 for Spacer Block installation.

**Figure 1**

Spacer Block RECOMMENDED


Note: Paddle at extreme angle.

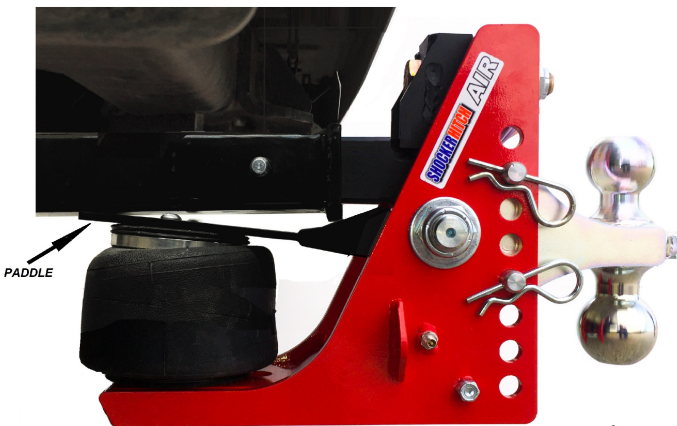

**Figure 2**

Spacer Block NOT Necessary

Note: Paddle generally level.

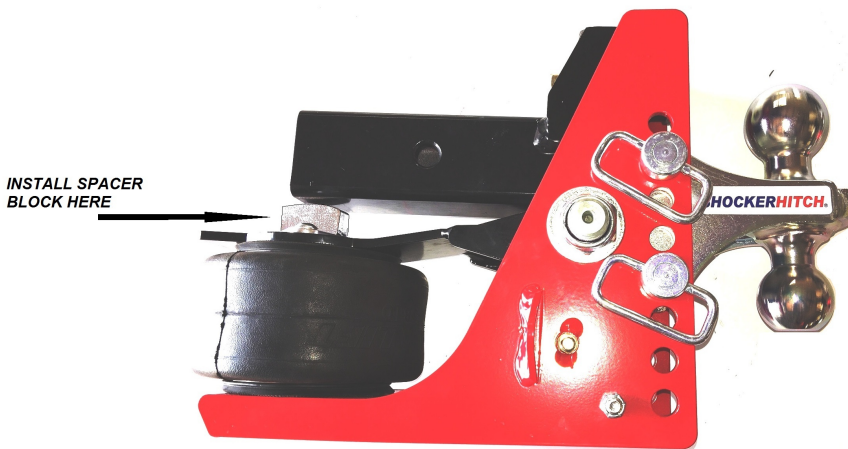

**Figure 3**

Using the allen wrench (included), INSTALL the Spacer Block using the two bolts 3/8" X 3/4" that retain the top of the airbag. This will keep the airbag at its proper operating height.

**SHOCKERHITCH PO Box 162 Arthur, ND 58006 701-707-2666**

[service@shockerhitch.com](mailto:service@shockerhitch.com)

[www.shockerhitch.com](http://www.shockerhitch.com)